


Freedom 5-Jar 64mm Cleaning machine test per Omega Working Instructions I-09-T-048-E

The Freedom has been tested using Omega working instructions for cleaning machines. The Freedom has passed the test. The Omega-supplied test discs are placed in the cleaning baskets. The discs are cleaned. A 1-2mm diameter drop of Omega supplied oil is placed on the center of the disc. After 20-40 minutes, the oil is inspected. The oil should have spread across the face of the test disc. The discs are then discarded. Following please find the test parameters and images of the results.

Freedom 64mm 5 jar machine

Jar 1	Wash 4 minutes	Fast agitate	Ultrasonic ON	Zenith Formula 67
Jar 2	Rinse 3 Minutes	Fast agitate	Ultrasonic ON	Zenith Drizebrite
Jar 3	Rinse 3 Minutes	Fast agitate	Ultrasonic ON	Zenith Drizebrite
Jar 4	Rinse 3 Minutes	Fast agitate	Ultrasonic ON	Zenith Drizebrite
Jar 5	Empty			
Dry	6 minutes			

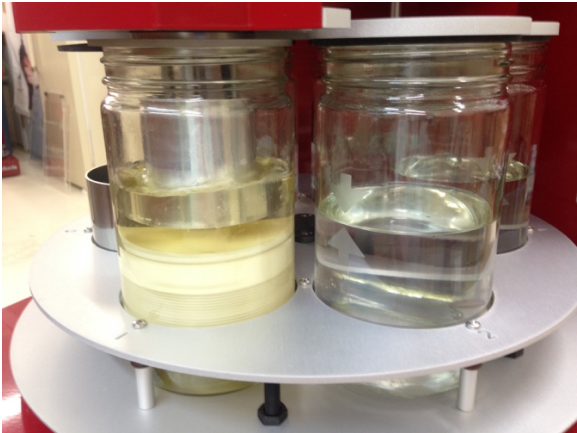

Top Basket 64-3-WR Disc 1
Center Basket 64-3-WR Disc 2
Bottom Basket 64-3-WR Disc 3

Allow to cool 10 minutes
Apply 1-2mm diameter drop of #4 oil
Wait 20-40 minutes



The numbers on the images on page two and three show the basket number and the results after 20, 30 and 40 minutes.

All the tests show a passing result.

